

Title:	Pump Gassing	ID:	
		0326	
Date in:	Response:	Model:	Author:
2008-02-07	2008-02-07	-	RKi

Q:

Is it normal that the CO2 pump is always running?

A:

The CO2 Pump should run constantly, except the unit is heated above 50°C. Above this temperature the pump switches off.