

Title:	Change of Lift Speed	ID:	
		<i>0310</i>	
Date in:	Response:	Model:	Author:
<i>2008-10-10</i>	<i>2008-10-10</i>	-	<i>CMa</i>

Q:

One of our customers would like to speed down the lift in the incubator.

Is it possible?

If yes, is it a simple command or do we have to download a new firmware?

A:

Yes, the lift speed can be changed. This would require you installing a new FW. We would provide you such FW after you let us know how much slower you want the speed to be set.