

Title:	Beep Signals			ID:
				0043
Date in:	Response:	Model:	Author:	
2005-03-04	2005-03-04	-	-	

Beep signals

From the information I can get it seems as there are only 3 different “beeps” signal on the Liconic incubators.

1. “Beep” every 1 second – when door switch is not activated
2. “Beep” every 3 seconds – when unit needs to be initialised
3. “Beep” every 30 seconds – when low water switch in ON