


Accessories – Transfer Stations

Lift Station

When Stand Alone machines are placed under the Table they can be provided with a Lift Station to transfer the Plates to a external system.

The Lift Station is normally in upper Position, when Handler loads or unloads a Plate to the Station the station goes to the load Position.

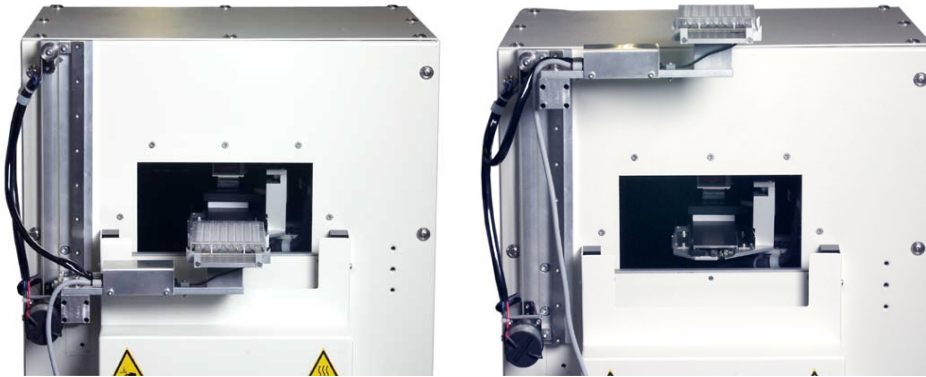

Specifications

Plate Positions	1
Sensor	Plate presence sensor
Layout	Vertical lift
Displacement	Vertical (up of down)
Application	Deliver plate on different height or interconnect two units