

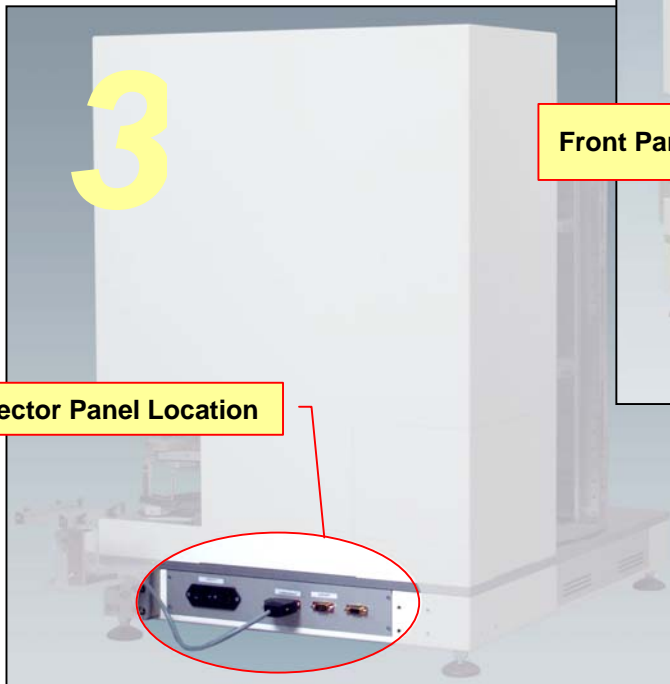
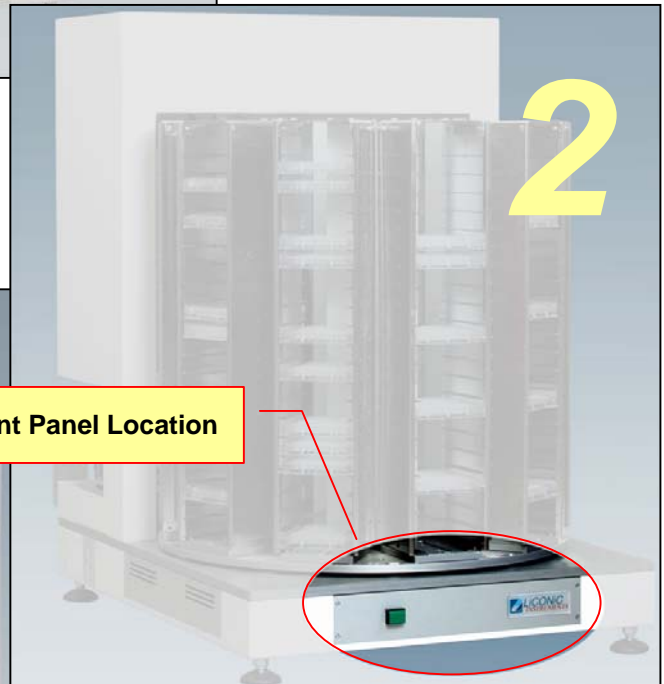


LPX220 Configuration

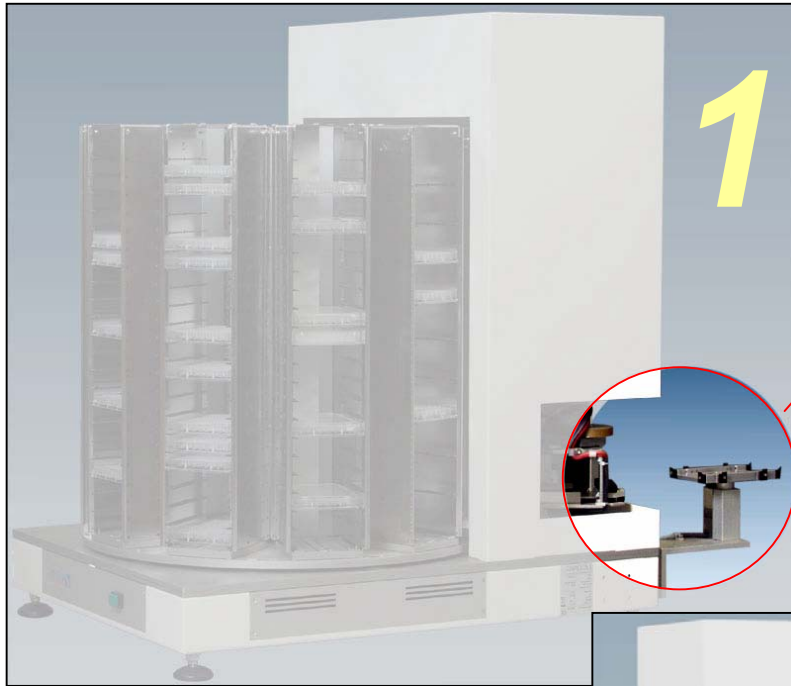


1. Transfer Station Locations

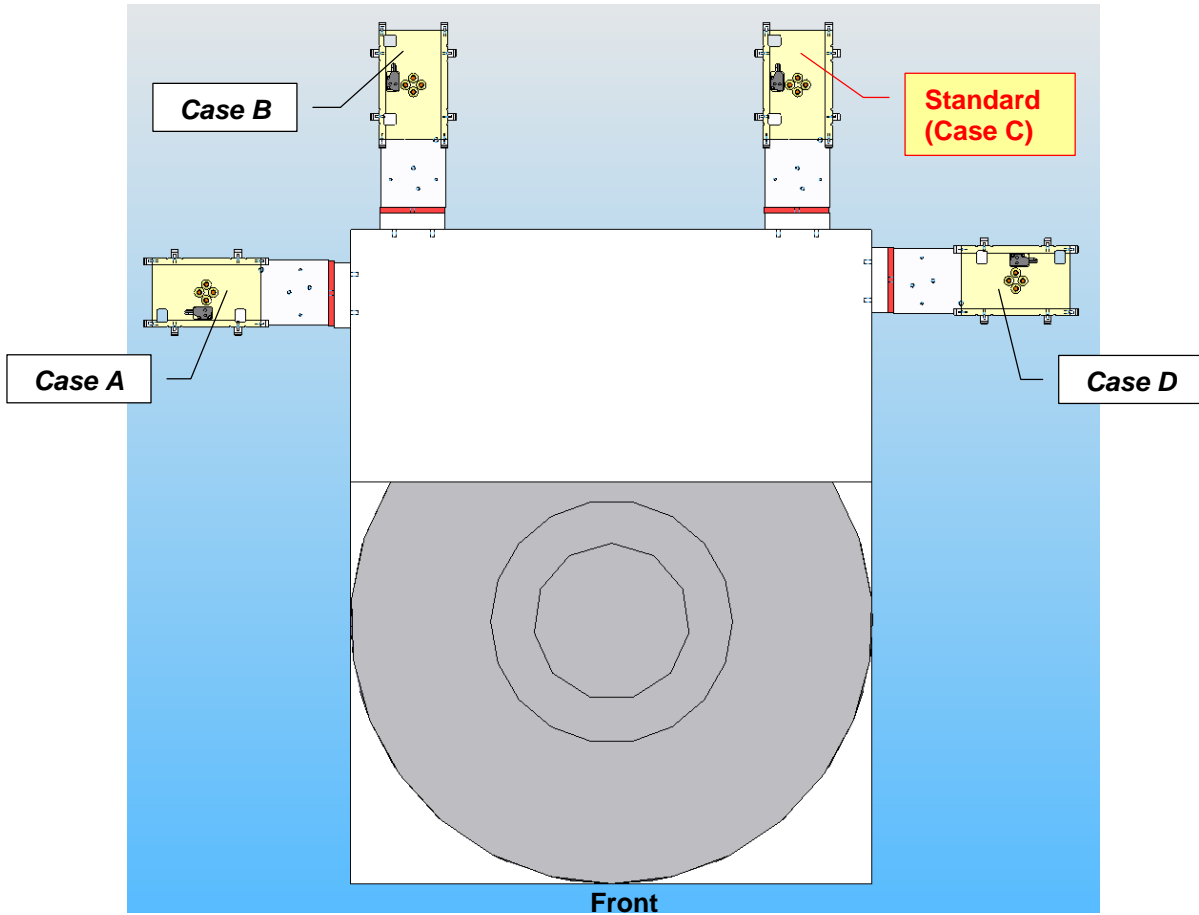


| Transfer Station Locations | | |
|----------------------------|---|------------|
| | Description | Order Nr. |
| Case A | Left Side Transfer Location, seen from front | 9144 00 91 |
| Case B | Mirrored Transfer Location | 9144 00 54 |
| Case C | Standard Transfer Station Location | |
| Case D | Right Side Transfer Location, seen from front | 9144 00 53 |

2. Front Panel Location

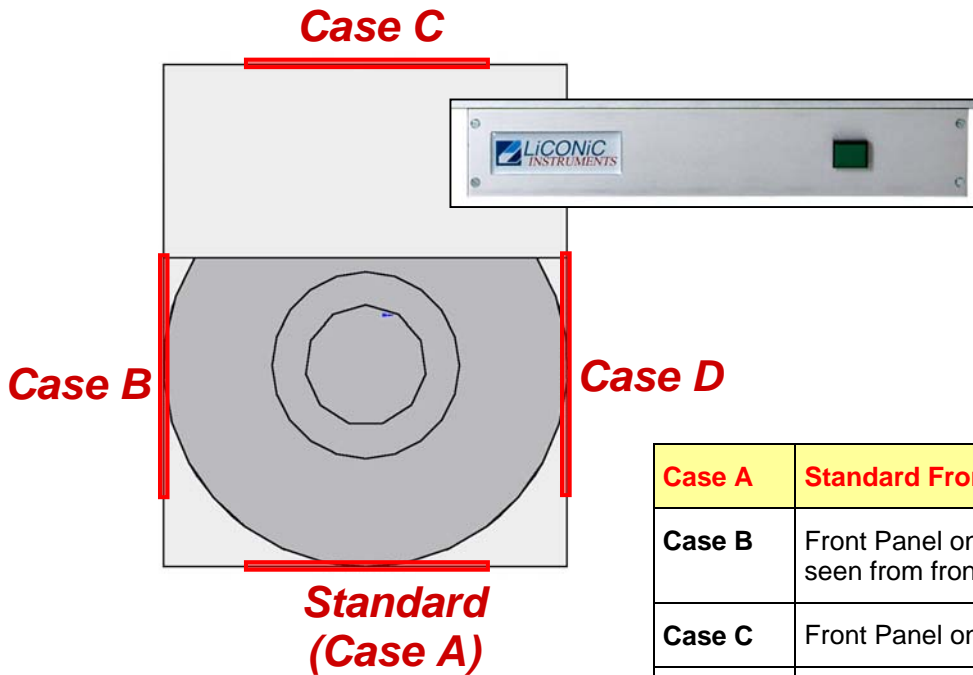

| Case A | Standard Front Panel Location |
|--------|--|
| Case B | Front Panel on the left side, seen from front |
| Case C | Front Panel on the back side |
| Case D | Front Panel on the right side, seen from front |

3. Connector Panel Location

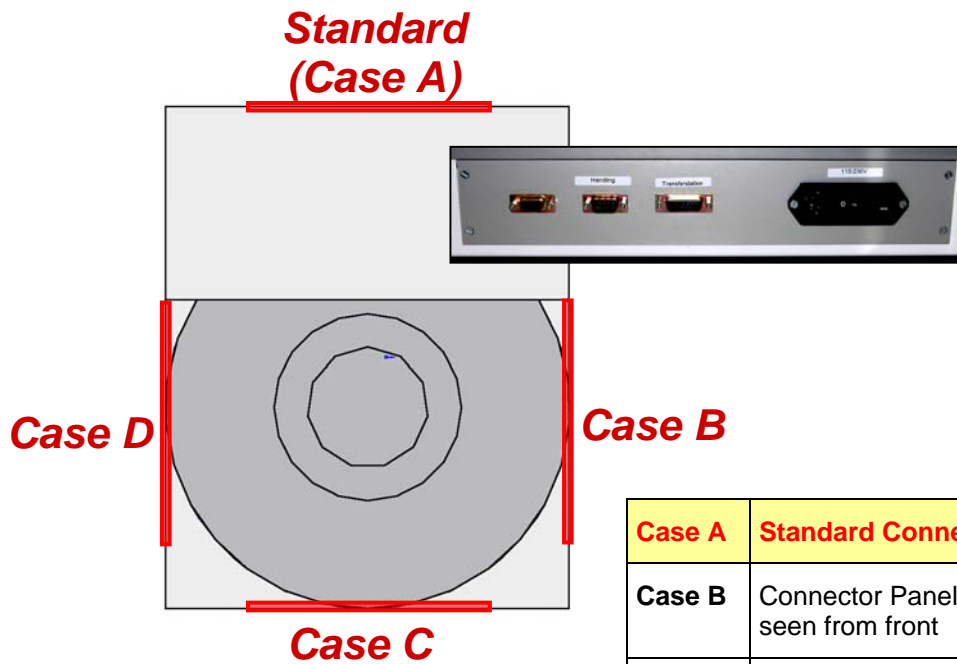

| Case A | Standard Connector Panel Location |
|--------|--|
| Case B | Connector Panel on the right side, seen from front |
| Case C | Connector Panel on the front side |
| Case D | Connector Panel on the left side, seen from front |